

Gigaset

SL910H

Congratulations

By purchasing a Gigaset, you have chosen a brand that is fully committed to sustainability. This product's packaging is eco-friendly!

To learn more, visit www.gigaset.com.



GIGASET. INSPIRING CONVERSATION.
MADE IN GERMANY

Contents

Overview of handset	3
Display icons	4
Safety precautions	6
First steps	7
Operating the handset	11
Activating/deactivating the handset	11
Operating the touchscreen	11
Handset idle display	11
Using the menus	13
Scrolling through lists (vertical scrolling)	14
Options	15
Entering numbers and text, incorrect entries	15
Returning to idle status	16
Returning to the previous key display page	16
Activating/deactivating key and display lock	17
Making calls	17
Making external calls	17
Making internal calls	18
Accepting a call	18
Speaker mode	18
Switching to mute	18
Security check	18
Menu tree	19
Menu Settings	19
Using lists	21
Redial list	21
Missed appointments list	21
Opening lists via the message page in the idle display	21
Deleting lists	22
Configuring the display of new messages	22
Configuring the scope of the number information in the lists	22
Using the directory	23
Opening the directory (list of directory entries)	23
Creating a new entry in the directory	23
Order of directory entries	23
Selecting a directory entry, navigating in the directory	24
Dialling with the directory	24
Managing directory entries	24
Transferring an entry/directory to another handset	24
Transferring the directory as a vCard with Bluetooth	25
Receiving a vCard with Bluetooth	25
Adding a displayed number to the directory	25
Copying a number from the directory	25
Reminder call on an anniversary	25
Using Bluetooth devices	26

- ECO DECT: reducing energy consumption and radiation** 27
- Using a handset as a room monitor** 28
- Setting an appointment (calendar)** 29
 - Displaying missed appointments, anniversaries 29
 - Setting a reminder call 30
- Setting the alarm clock** 30
- Screensaver, caller pictures and sound pool** 30
- Using the handset on the base** 31
 - Registering a handset to another Gigaset SL910/SL910A base 31
 - De-registering the handset 31
 - Changing the base 31
- Configuring the handset** 32
 - Quick access to functions, QuickDial – customising your own idle display page 32
 - Changing the display language 34
 - Configuring the keyboard/keypad 34
 - Setting the display 34
 - Activating/deactivating auto answer 34
 - Changing the earpiece, speaker and headset volume 35
 - Setting a speaker profile 35
 - Setting ringtones 35
 - Activating/deactivating silent alert 36
 - Activating/deactivating ringtone/silent alert 36
 - Activating/deactivating advisory tones 36
 - Restoring the handset default settings 36
- Service (Customer Care)** 37
 - Questions and answers 37
 - Exclusion of liability 37
 - Authorisation 38
 - Guarantee Certificate - United Kingdom 38
 - Guarantee Certificate - Ireland 39
- Environment** 40
- Appendix** 41
 - Care 41
 - Contact with liquid 41
 - Specifications 41
- Accessing additional functions via the PC interface** 42
- Index** 43

Overview of handset



Message LED (→ page 22)

Proximity sensor (→ page 17)

Touchscreen/display (→ page 11)

Sample display: "dial page" for entering phone numbers in idle mode (one of three idle display pages; → page 11).

Status bar (→ page 12)

The internal handset name (e.g., INT 1) and icons (→ page 4) that display the current settings and the operating status of the phone
Touch the status bar to display the status page.

Navigation area (→ page 12)

Page position marker , change page  .

Keypad

Numerical keypad to enter phone numbers


Option slider (→ page 15)

Displays the possible actions


Handset keys:

 **Talk key**

Dial displayed number, accept call
During call/when establishing a connection: switch between earpiece mode and speaker mode
In idle status: open redial list (press **briefly**)


 **End call/end key**

Press **briefly**: end (active) call/paging call, reject internal call
Switch off ringtone for external call
Otherwise: return to idle status
Press and **hold**: activate/deactivate handset

 **Menu key**

Press **briefly**: open main menus (→ page 13)
Press and **hold**: activate/deactivate key and display lock (→ page 17)

Underside of the handset:

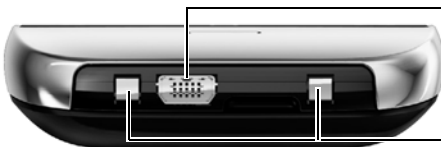

Mini USB connection socket











 
Connect wire-bound headset or handset to your PC (Gigaset QuickSync)










Charging contacts

Display icons

Icons in the status bar

The following icons are displayed in the status bar depending on the settings and the operating status of your telephone:

Icon	Meaning
	Signal strength (Eco Mode+ off) 76%–100% 51%–75% 26%–50% 1%–25% } White if Eco Mode is off Green if Eco Mode is on
	
	
	
	
	Eco Mode+ activated: White if Eco Mode is off Green if Eco Mode is on
	Answering machine activated
	Bluetooth activated or Bluetooth headset/data device connected
	
	Ringtone deactivated
	Alarm switched on and wake-up time set

Icon	Meaning
	Battery charge status:
	White: charged over 66%
	White: charged between 34% and 66%
	White: charged between 11% and 33%
	Red: charged below 11%
	Flashing red: battery almost empty (less than 10 minutes talktime)
	Battery charging (current charge status):
	0%–10%
	11%–33%
	34%–66%
	67%–100%

Gigaset service contact numbers:

For personal advice on our range of products and for repairs or guarantee/warranty claims call:

Service Centre UK: 0845 367 0812
(local call cost charge)

Please have your proof of purchase ready when calling.

Option slider icons

The functions on the option slider change depending on the operating situation.

Icon	Action
	Activate speaker mode
(orange)	(Speaker mode is activated) Deactivate speaker mode
	Speaker profile
	Deactivate handset microphone
(orange)	Reactivate handset microphone
	Deactivate ringtone
(orange)	(The ringtone is deactivated) Reactivate ringtone
	Set the volume
	Open call lists
	Open the directory
	Copy number to the directory
	Create SMS
	Send SMS
	Reply to SMS
	Open the draft list
	De-register handset
	Open list of internal callers/make internal call
	Create new directory entry
	Initiate a consultation call:
(orange)	End a consultation call
	Initiate three-way conference call
(orange)	End a conference call
	QuickDial
	Copy list
	Add name, number etc. to an entry
	Copy entry
	Edit entry

Icon	Action
	Show keypad
	Determine free memory in the media pool
	Search
	Skip settings
	Delete
	Save/select
	Enter new appointment
	Calendar: Set selected date to Today
	Change order (sort by last name or first name)
	Directory entry: Delete caller ringtone assignment
	Directory entry: Delete caller picture assignment
	Delete anniversary
	Trust Bluetooth device found
	Divert call to answering machine
	Play answering machine messages
	Answering machine: record an announcement
	Answering machine: end recording
	Answering machine: for message playback: go back five seconds
	Initiate ringback
	Accept a waiting call

Safety precautions

Warning

Read the safety precautions and the user manual before use.
Explain their content and the potential hazards associated with using the telephone to your children.

- ◆ Use only the power adapter supplied.
- ◆ Use only the **supplied, original batteries** (→ page 41) as this could otherwise result in significant health risks and personal injury. Replacement batteries can be obtained via the Gigaset Service Hotline.
- ◆ Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery.
If you use a medical device (e.g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy. Please refer to the "Appendix" chapter for the specifications of this Gigaset product.
- ◆ Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.
Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed.
The handset may cause interference in analogue hearing aids (humming or whistling) or override them. If you require assistance, please contact the hearing aid supplier.
- ◆ Do not install the charger in bathrooms or showers. The handset is not splashproof (→ page 41).
- ◆ Do not use your phone in environments with a potential explosion hazard (e.g., paint shops).
- ◆ If you give your phone to a third party, make sure you also give them the user guide.

Please note

- ◆ Not all functions described in this user guide are available in all countries and with all network providers.
- ◆ The device cannot be used in the event of a power failure. In this case, it is also not possible to transmit **emergency calls**.

After purchasing your Gigaset phone, please register it at www.gigaset.com/service – this will ensure any questions you may have or warranty services you request are dealt with even faster!

For more information about your phone, visit www.gigaset.com/gigaset910

If you have any questions about using your phone, please read the tips on troubleshooting (→ page 37) or contact our Service team(→ page 37).

First steps

Checking the package contents

One Gigaset SL910H **handset**, one battery cover (rear cover of the handset), one battery, one **charger**, one power adapter for the charger and one user guide.

Setting up the charger


The charger is designed for use in dry rooms in a temperature range of +5°C to +45°C.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

Please note:

- ◆ Never expose the telephone to the effects of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.

Connecting the handset charger

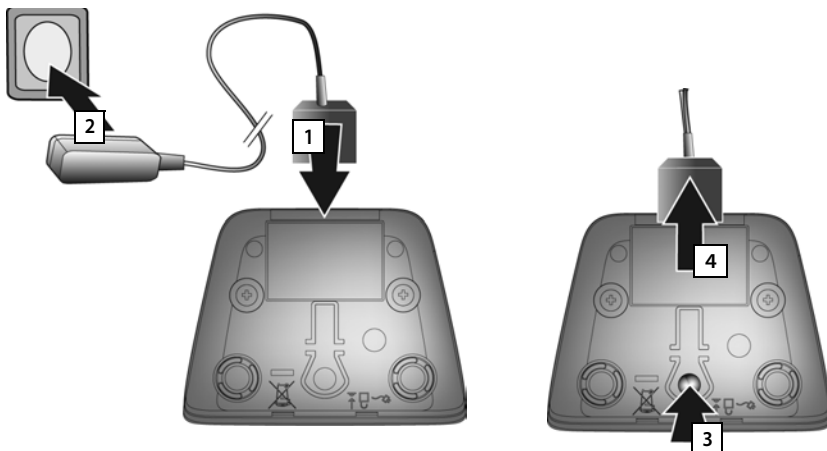

- ▶ Connect the flat plug on the power adapter **1**.
- ▶ Plug the power adapter into the plug socket **2**.

Remove the plug from the charger:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3** and disconnect the plug **4**.

Setting up the handset for use

The handset's display and keys are covered with a protective film. **Please remove the protective film!**

Warning

Please do **not** use any touchscreen styli to operate the handset!



Do not use any protective sleeves/films from other manufacturers, as they may restrict the operation of your handset.

Inserting the battery and closing the battery cover

Warning

Use only rechargeable batteries (→ page 41) recommended by Gigaset Communications GmbH, as doing otherwise could result in significant health risks and personal injury. For example, the outer casing of the battery could be destroyed or the battery could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.


- ▶ First insert battery with the contact surface facing down **1**.
- ▶ Then press the battery downwards **2** until it clicks into place.

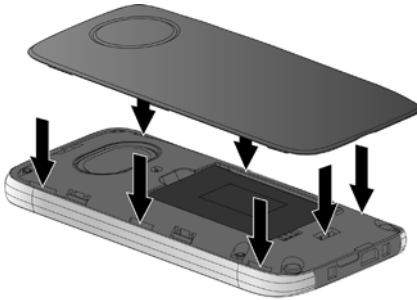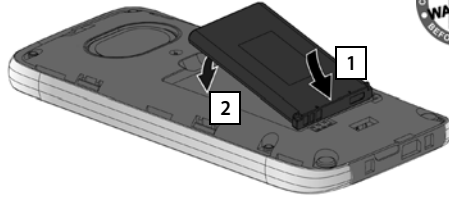


- ▶ First, align the protrusions on the side of the battery cover with the notches on the inside of the casing.
- ▶ Then press the cover until it clicks into place.

To **reopen the battery cover** to replace the battery:

- ▶ Insert your fingernail into the cavity on the bottom of the battery cover and pull the battery cover upwards.

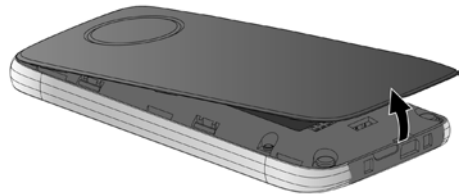

- ▶ To **remove the battery**, insert your fingernail into the cavity on the casing and pull the battery upwards.

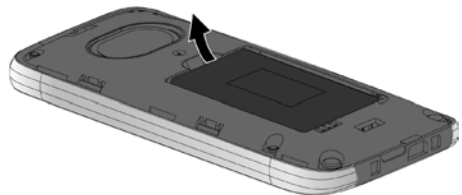

Charging the battery

The battery is supplied with a partial charge. Please charge it completely before use.

- ▶ Charge the handset in the charger for **5 hours**.

Please note

The handset must only be placed in the designated charger.

- ▶ Place your handset back in the charger after every call.



Please note


- ◆ The battery is also charged if the handset is connected via a USB connection to a PC with a power supply of 500 mA.
- ◆ The battery may heat up during charging. This is not dangerous.
- ◆ After a time, the charge capacity of the battery will decrease for technical reasons.

Registering the handset to the base

Please note

We recommend that you operate the handset on the Gigaset SL910 and Gigaset SL910A bases. On other bases you will not be able to use the full range of functions of your handset. In particular, you will not be able to configure the base via the handset.

Once the handset is sufficiently charged:

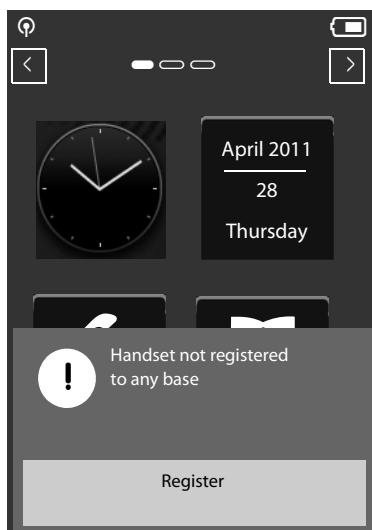

- ▶ Touch **Register** to start the registration process on the handset.

The message "Searching for a base which is in registration mode" appears in the display.


Setting the base to registration mode:



- ▶ Within one minute, press and hold the registration button on the base for 3 seconds.

First steps

If the system PIN 0000 (default setting) is set on the base, the message "✓ Handset registered" appears. Skip the following step.

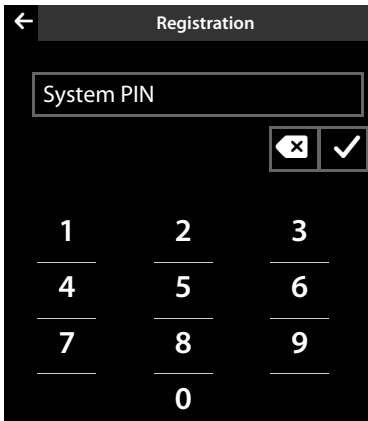If the base system PIN is not 0000:



- ▶ Using the keypad displayed, enter the system PIN for the base.
You can correct incorrect entries using .
- ▶ Touch  after entering the PIN to complete the entry.


After successful registration, the message "✓ Handset registered" appears.

This will start the installation wizard. If applicable, the values set on the base for the date, time, country, country code and local area code are displayed. You can also change the display language of the handset.

The sequence of the installation wizard is described in the user guide for the Gigaset SL910 or SL910A. Once the installation wizard has finished, the handset returns to idle status (→ page 10).

Handset in idle status

Once you have configured all the necessary settings, your handset switches to idle status. There are three idle display pages (→ page 11). When you first set up the phone, the **configurable page** that you can customise is displayed. Here, you can compile important functions and phone numbers for quick access (→ page 32). Some are set by default.

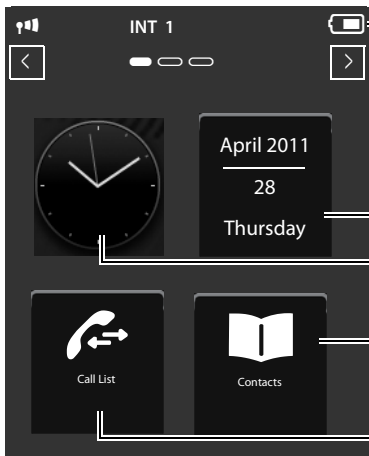

Status bar

Contains the internal handset name (e.g., INT 1) and icons that display the current settings and the operating status of the phone.

To discover the meaning of the icons, see page 4.

Touch the status bar to display the status page (→ page 12).

Current date

Time



Open the directory

Open call lists

Your phone is now ready for use.

Operating the handset

Activating/deactivating the handset

- ▶ Press and **hold** the end call key  in idle status to deactivate the handset. You will hear a confirmation tone.
- ▶ Press and **hold** the end call key  again to reactivate the handset.

Operating the touchscreen

The Gigaset SL910H handset is primarily operated using the display and only to a small extent using the three buttons on the handset.

Icons, list entries, buttons and sliders shown on the display are sensitive areas. You can set up and activate functions, enter or dial phone numbers and navigate between the various display screens (pages) by touching these areas and dragging them across the display.

Selecting functions/list entries

To activate a function or select a list item (directory, submenu, call list), simply tap your finger on the corresponding icon or on the required list entry on the display.

Activating/deactivating functions

Functions, e.g., room monitor, are activated and deactivated via buttons.

If the button slider is to the right, the function is activated. The area to the left of the slider is highlighted (on).

If the button slider is to the left, the function is deactivated (off). The area to the right of the slider is black.

There are two ways to operate a button:

- ▶ Slowly drag the slider to the right or left to activate or deactivate the function.
- ▶ Touch the area to the right or left of the slider **briefly** and the slider moves to the right or left to the area that has been touched.

Function
activated



Slider

Function
deactivated



Slider

Handset idle display

The idle display consists of three pages that are shown separately on the display.

◆ The **configurable page** (example → page 10)

You can customise this page yourself. More detailed information on configuring this page is available on page 32.

By default, the date and time are displayed and quick access can be set for call lists and the directory (→ page 10).

◆ The **dial page** (example → page 3)

You will need this page to make calls. The dial page contains a keypad (numerical keyboard) for entering phone numbers. You can use the options on this page to make internal calls and to dial numbers from the directory and the call lists.

◆ The **message page** (example → page 21)

You can use this page to go straight to the message lists for the phone (dependent on base): call lists, answering machine list, SMS inbox and network mailbox. An icon and the number of new and old messages are displayed for each list that contains entries. Touch the icon to open the corresponding list.


The default configuration, i.e., after the handset is switched on for the first time, is to display the configurable page.


Navigation area, changing the page


You have to scroll right or left to move from one page to the next.




Each idle display page therefore has a navigation area (example):



The page position marker  shows which idle display page is currently being displayed. The example shows the middle page.

▶ To scroll to the right, touch the  icon in the navigation area or place a finger on the display and drag it to the left.

▶ To scroll to the left, touch the  icon or place a finger on the display and drag it to the right.

The scroll function is continuous. On the third page (far right; ) touch  again to display the first page (far left; )

Status bar and status page


On each of the three pages, a status bar appears in the header.




For the corresponding icons and their meaning, see page 4.


Touch the status bar to display the **status page**. Via this page, you have direct (quick) access to the Bluetooth interface, the ringtone settings and the alarm as well as the base functions Eco Mode, Eco Mode+ and to the base answering machine, if available.

Status page:

- ◆ You can use the button on the right to activate or deactivate the relevant components directly. To do this, drag the slider  on the touchscreen to the right (**on**) or the left (**off**). Functions that are not available are greyed out and their switches are inactive.
- ◆ Touching the list entry e.g., **Alarm**, opens the corresponding pop-up menu that you can use to configure all the settings for the component.
- ◆ Touching **Show Service Info** displays the service information for your handset. You may need the service information when you contact our hot-line.

Closing the status page

- ▶ Touch the  icon in the header to return to the idle display.

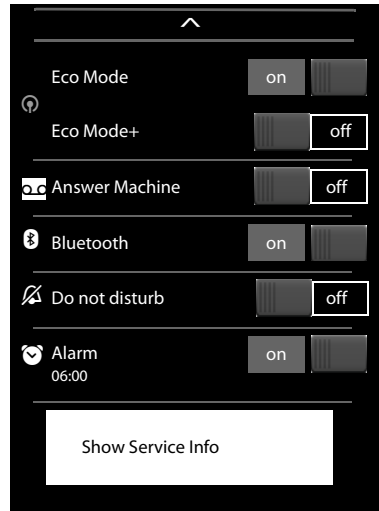

Using the menus


All the functions for the base and the handset are provided in a menu (main menu).

Open the menu:

- ▶ Briefly press the middle key **O** when the handset is in idle status.

The main menu is divided into two "pages" that are displayed separately. The **Applications** page (subsequently referred to as the **Applications** menu) comprises all the applications offered by your base or handset. The **Settings** page (subsequently referred to as the **Settings** menu) offers all the setting options for the base, handset and telephony.

The following picture shows examples of the menus. The functions/applications that the menus contain depend on the firmware version loaded on the handset and on the base.

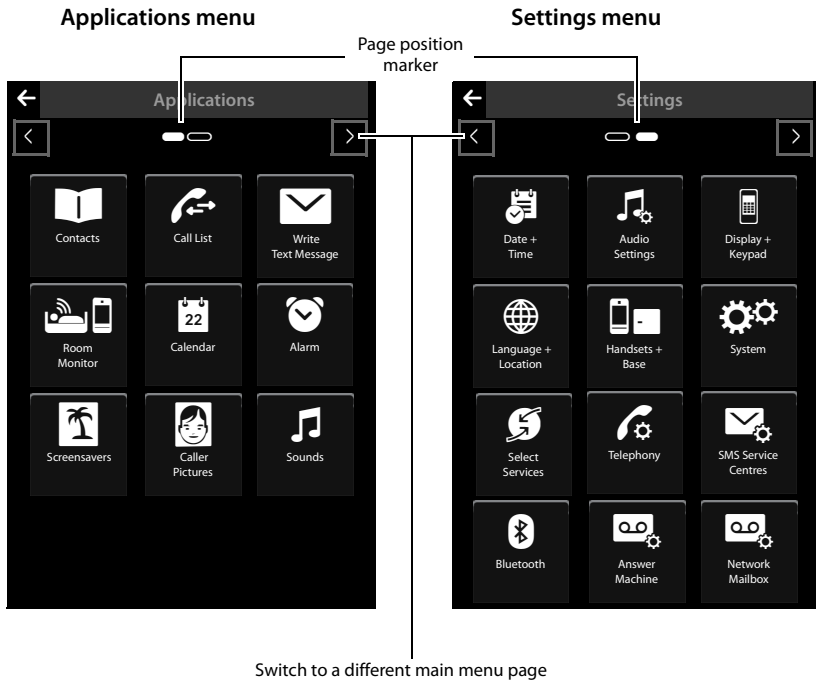

Changing between the menu pages


You can switch between the menu pages in the same way as you switch between the pages in idle mode, using **←**, **→** or dragging horizontally over the display (→ page 12).

Applications that are currently unavailable and settings that cannot currently be accessed (e.g., because the handset is out of range of the base) are greyed out.

Opening the submenu

Touch an icon on one of the main menu pages and it will be highlighted. The corresponding submenu or a new display page is opened up with settings options for the application.

The submenus are displayed as lists. The lists contain the parameters that can be configured and the current setting, available options or buttons to activate/deactivate.

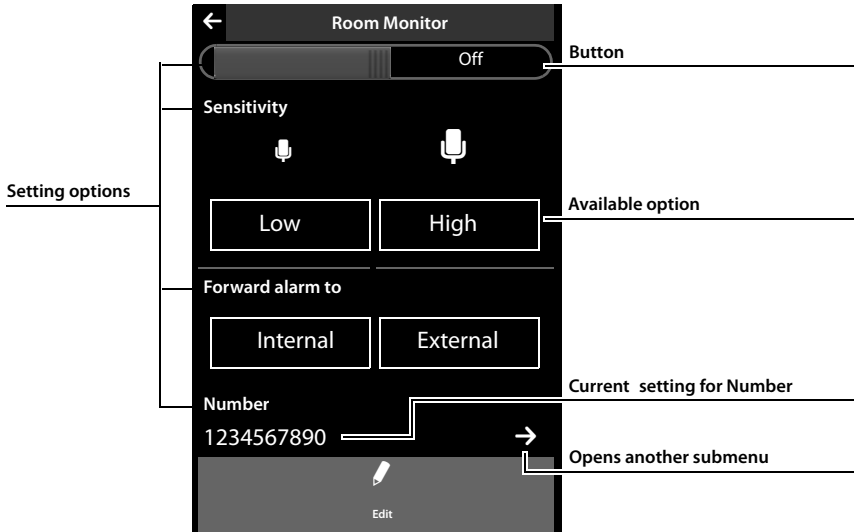

Scrolling through lists (vertical scrolling)

If lists (not submenus) are longer than the display, i.e., if it is not possible for all the list entries to be displayed at once, then a drop shadow on the lower and/or upper edge of the display indicates the direction you have to scroll in to view more of the list.

You have to scroll vertically through lists:

- ▶ Drag from bottom to top over the display to scroll down in the list (i.e., it appears as if you are pushing the section currently visible upwards out of the display so that the bottom section appears in the display).
- ▶ Drag from top to bottom over the display to scroll upwards in the list.

As soon as you scroll in a list, a scroll bar is displayed on the right side of the display. This shows the size and position of the visible section of the list.

Scrolling through lists is not continuous, i.e., you have to scroll back to return to the top from the end of the list.

Options

Many display pages (especially lists like directories, call lists) have an **option slider** in the lower section. This displays all the actions that you can apply in the current context.

- ▶ Touch an option to perform the corresponding action.

Example (moveable option slider):



If all of the options cannot be displayed at the same time in one row, a moveable option slider is generally used. You can scroll horizontally using the option slider.


Moving the option slider (horizontal scrolling)



A moveable option slider is identified by an arrow to the right and/or left next to the options (see the picture above). The arrows indicate that there are additional options to those that are visible.

- ▶ Place a finger on the option slider and drag to the left to view the options to the right.
- ▶ Pull the finger to the right to view the options to the left.

Showing/hiding option slider

While establishing an external connection and during an external call, an option slider with two lines is used instead of the moveable option slider.

If the space is not sufficient for the options available, the  icon is displayed below the option slider.

- ▶ Touch  to show further options.
- ▶ Touch  to hide them again.

Entering numbers and text, incorrect entries

The appropriate keypads are displayed to enter numbers and text: An keypad (numerical keyboard) for entering phone numbers or a system PIN; A (typewriter) keypad for entering text.


You use them to enter characters by touching the relevant character on the display. These then appear in the text or number field displayed on the page.

If several number and/or text fields are displayed (e.g., **First Name** and **Surname** in a directory entry), you must activate the field by touching it before writing. The flashing cursor is displayed in the activated field.


To avoid unnecessary incorrect entries: Touch a character on the keypad and this character is enlarged. If the wrong character is enlarged, you can move your finger to the required character (without lifting it from the display). The character is only copied to the text field once you lift your finger from the display.

Correcting incorrect entries

Briefly touch  to delete the last character.

 

Press and hold  to delete the whole content of the number or text field.

Entering text

- ▶ Touch the shift key  to change between lower and upper case.

If upper case is activated, the keypad is shown in upper case letters, otherwise it is in lower case. Upper case is only activated for the next character. Then lower case is automatically reactivated.

When editing a directory entry, the first letter and each letter following a space is automatically in upper case.

- ▶ Touch  if you want to enter a digit or a special character. Touch **More...** to view other special characters. Touch  to return to the normal keypad (lower case).

Operating the handset

- ▶ You enter special characters (marked/diacritical characters, e.g., umlauts) by pressing and **holding** the corresponding initial letter and selecting the required character from the list displayed.

Diacritical characters in the default character set:

a ä á à â ã æ å å c ç ć e è é è ê ë i ï í ì î
l ł n ñ ñ o ö ó ò ô õ ø ö s ß ś u ü ú ù û ú
y ÿ ý z ź ź

Diacritical characters in the Greek character set:


α á ε é η ή ι í î ï ο ó σ ς υ ú ü ù ω ώ

Diacritical characters in the Cyrillic character set:

е э ё э и й ї р р б б

- ▶ Due to the larger space requirement of the Cyrillic character set, you can also access the following letters by pressing and **holding** the bold characters shown below. Touch the required character.

ц ѝ х ъ ж э

- ▶ Touch  (if necessary several times) to change the character set or the keypad layout. The following keypad layouts are available:
 - Latin (default) character set with the keypad layouts QWERTZ, for Central Europe, QWERTY (American default) and AZERTY, for the French-speaking area
 - Greek character set
 - Cyrillic character set


Special features when writing an SMS

If the text of an SMS is so long that it cannot be completely displayed in the text field, the first section of the text disappears upwards from the visible area. A scroll bar is displayed on the right side of the text field, which you can use to scroll up and down within the text.

You can position the cursor within the text, e.g., to make corrections or add text. Touch the left half of a word and the cursor will be positioned at the start of this word. Touch the right half and the cursor will be positioned at the end of this word.

Text entered afterwards will be inserted before this word.


Returning to idle status

- ▶ Briefly press end call key .

Or:

- ▶ If you do not press any key and do not touch the display, the display **automatically** reverts to idle status after approximately three minutes.

Returning to the previous display page

Just like the idle display pages, the  icon appears on the left-hand side of the header on almost every page.

- ▶ Touch the icon to return to the previous display page (move backwards step by step).



Activating/deactivating key and display lock

The key and display lock prevents the phone being operated unintentionally.

When the handset is in idle status:

- ▶ Press and **hold** the **O** menu key to activate or deactivate the lock.

When you activate the key and display lock, the message **Keys and display locked** is displayed briefly. The display backlight switches itself off.

If you touch the display when the key lock is activated, nothing happens; if you try to press a key, a corresponding message is displayed.


The lock deactivates automatically when you receive a call. It is reactivated when the call is finished.

Please note


- ◆ When the key lock is active, you cannot call emergency numbers.
- ◆ The display is automatically locked with the aid of a proximity sensor if you hold the handset to your ear (display backlight disappears). This lock is deactivated again when you remove the handset from your ear.
The sensor is located on the right next to the earpiece. If you cover it accidentally with your finger during a call, the display will also be locked.

Making calls

Making external calls

- ▶ Open the dial page, enter the number, **briefly** press .

Or:

- ▶ Open the dial page, press and **hold** , enter the number.

You can cancel dialling by pressing .

Continuing a call on a headset

Bluetooth headset:

Prerequisite: Bluetooth is activated; the Bluetooth headset and the handset are connected (→ page 26).

- ▶ Press the talk key on the headset.

It may take up to 5 seconds to establish a connection to the handset.

Use [ **Volume**] to adjust **Headset Volume/Microphone Sensitivity**.

For further details about your headset, see the accompanying user guide.

Wire-bound headsets:

Prerequisite: The headset is connected to the handset (→ page 3).

- ▶ Press the push-to-talk key on the headset.

For more information, see the headset's user guide.


Please note

If a wire-bound headset and a Bluetooth headset are connected at the same time, you are unable to use the wire-bound headset.

Making internal calls


Internal calls to other handsets registered to the same base are free of charge.

- ▶ Open the dial page (→ page 11). ▶ Touch [ Internal]. ▶ If necessary, select the handset from the list or touch **All**.

After opening the list, press  to initiate a group call to all handsets.

Accepting a call

You have the following options:

- ▶ Press .
- ▶ Take the handset out of the charger if **Auto Answer** is activated (→ page 34).

Accepting a call on a Bluetooth headset

Prerequisite: Bluetooth is activated; the Bluetooth headset and the handset are connected (→ page 26).

Only press the talk key on the headset once the headset rings.


For further details about your headset, see the accompanying user guide.

Speaker mode

You can configure various profiles for speaker mode (→ page 35).



- ▶ If you are going to let someone listen in, you should tell the other party that this is happening.

Activating while dialling


- ▶ Enter the number, press  twice.

Switching between earpiece and speaker mode

During a call, when establishing a connection and when listening to a (network) answering machine:

- ▶ Press  or touch [ Speaker].

Place the handset in the charger during a call:

- ▶ Press and hold  while placing the handset in the charger and for a further 2 seconds.

Switching to mute

If you deactivate the handset microphone during an external call, the other parties cannot hear you, but you can still hear the other party.

Switch to mute, cancel muting (activate/deactivate microphone):

- ▶ Touch [ Mute].

Security check

The handset detects unsecured connections to the base, where third parties could listen in.

When establishing an external call or during an external call:

- ▶ Press and hold any position on the status bar.


If **Secure connection to base** is displayed, the connection is secure.

If **No secure connection to base** is displayed, you should end the call.


Menu tree

- ▶ Briefly press the **O** key when the handset is in idle status to open the main menu. The main menu consists of the **Applications** (→ page 19) and **Settings** pages.
- ▶ Drag your finger horizontally across the display to switch between the pages.

Menu Settings

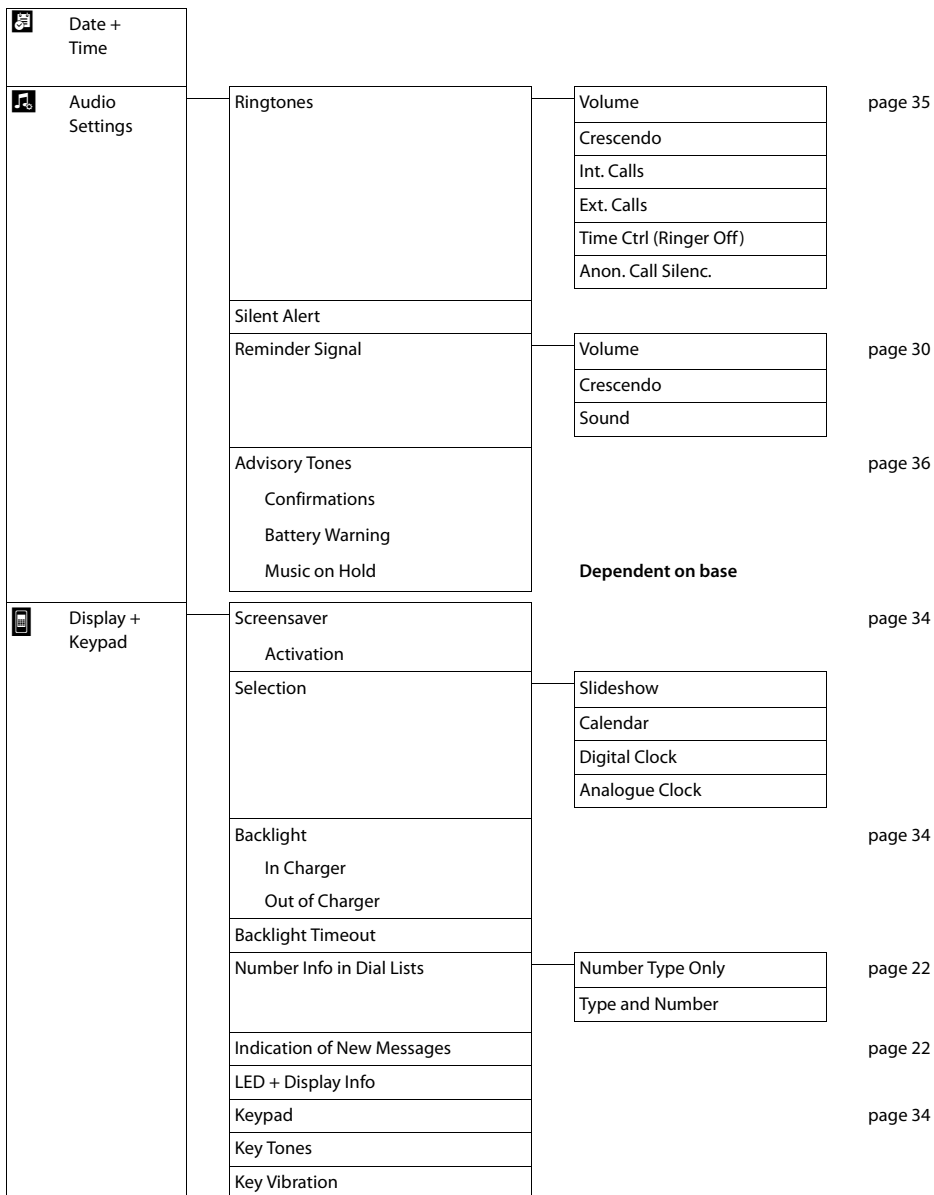

Menu tree

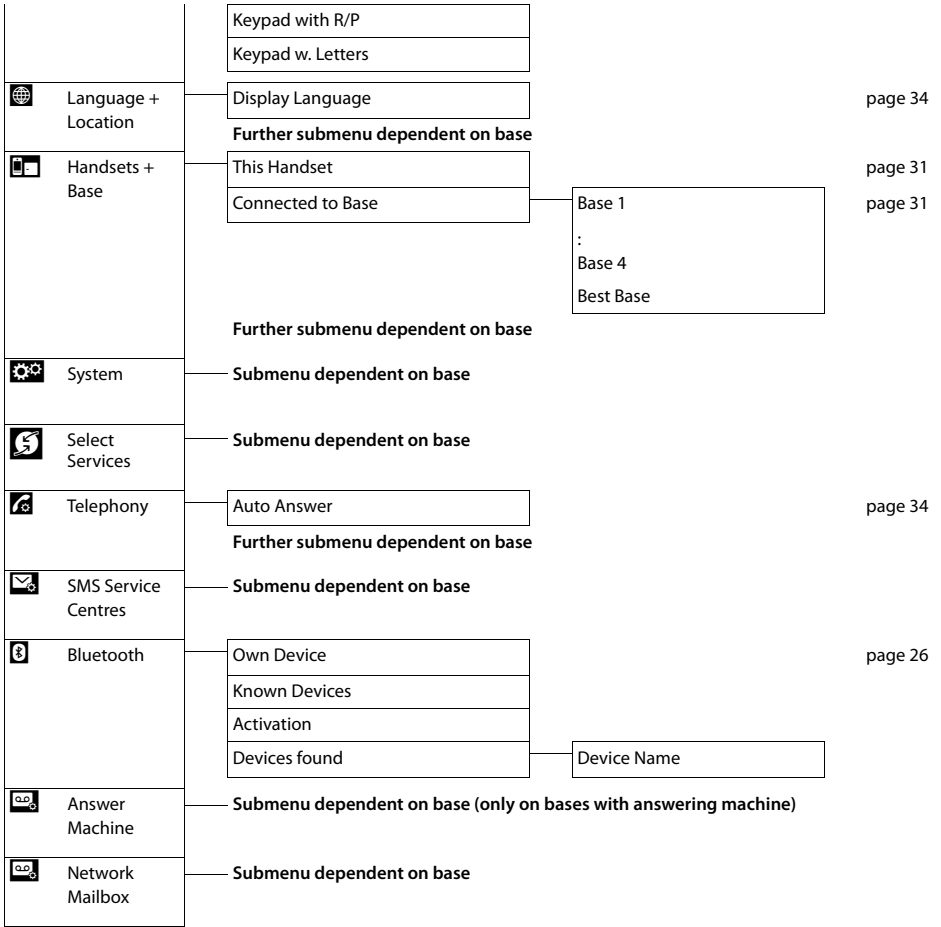

Using lists

The options are: redial list, SMS inbox, call lists, list of missed appointments, answering machine list (dependent on base).



Redial list

The redial list contains the twenty numbers last dialled with the handset (max. 32 digits per number).

To dial using the redial list, when the handset is in idle status:

- ▶ Press  **briefly**.
- ▶ Touch an entry in the list.

Managing entries in the redial list

- ▶ Open redial list. ▶ Touch  next to an entry. The detail view for this entry opens. You can:
 - Call: Press .
 - Delete entry.
 - Save the number in the directory (as in the directory, → page 25).

Missed appointments list

Missed (unacknowledged) appointments from the calendar (→ page 29) and birthdays (→ page 25) are saved in the **Reminders / Events** list under the following circumstances:




- ◆ You do not acknowledge the appointment/birthday reminder.
- ◆ The appointment/birthday was signalled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/birthday.

You open the list via the message page in the idle display (→ page 21).

If 20 entries are saved in the list, the oldest entry is deleted at the time of the next unacknowledged appointment reminder.

Deleting entries

When the handset is in idle status:


- ▶ Open the message page and touch  and [ Delete] in sequence.
- ▶ Touch all the entries to be deleted in sequence and then touch [ Delete].

Opening lists via the message page in the idle display

- ◆ If applicable, the answering machine list (e.g., Gigaset SL910A)
- ◆ Network mailbox
- ◆ SMS inbox
- ◆ Missed calls list
- ◆ Missed appointments list (→ page 21)




The list of missed calls and the answering machine list (if applicable) are always displayed. The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

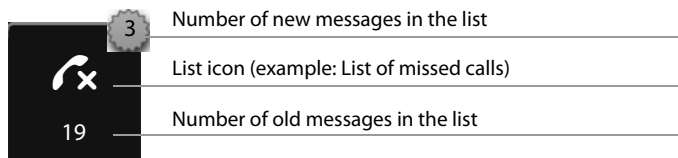The icons have the following meanings:




Deleting lists





You can delete the entire contents of the individual lists:

- ▶ In the **Settings** menu (→ page 13), touch [ **System**]. ▶ (If necessary, scroll). ▶ Touch  next to **Clean-up List**. ▶ Touch  next to the list to be emptied. ▶ Press **Yes** to confirm.

Configuring the display of new messages

 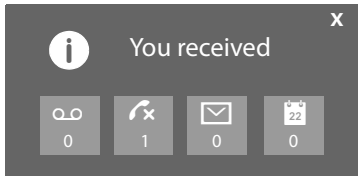An advisory tone sounds as soon as a **new entry** arrives in a list. In idle status, the following message appears:



- | Icon | New message... |
|---|---|
|  | ... in the answering machine list or on the network mailbox |
|  | ... in the Missed Calls list |
|  | ... in the SMS list |
|  | ... in the Reminders / Events list |


The number of new messages is displayed under the icons.

- ▶ **Open the list:** Touch the list icon.
- ▶ **Close the message:** Touch x (top right).

 
For messages from the network mailbox, please refer to the user guide.

Configuring extended display of new messages

Specify whether, in the case of new messages, the message LED on the left next to the earpiece should also flash.


 
- ▶ In the **Settings** menu (→ page 13), touch [ **Display and Keypad**].
- ▶ Activate or deactivate the message LED using the button.

[ **Display and Keypad**] submenu

 


Configuring the scope of the number information in the lists

A directory entry exists for a phone number that has been transferred: Determine whether the list should display the selected phone number as well as the name and number type.

- ▶ In the **Settings** menu (→ page 13), select [ **Display and Keypad**]. ▶ Touch the  next to **Number Info in Dial Lists**.
- ▶ Select **Number Type Only** (phone number in the detail view only) or **Type and Number**.

[ **Display and Keypad**] submenu



Using the directory

You can create the directory (with up to 500 entries) individually for your handset. You can also send lists/entries to other handsets (→ page 24).

Please note



To quickly access a number from the directory, you can place the number on the configurable page in the idle display (→ page 32).

You can save up to eight numbers, together with the associated first name and surname, birthdays/anniversaries with signalling, VIP ringtone and caller picture in each **directory entry**.


Length of the entries

8 numbers: Max. 32 digits each
 First name and surname: Max. 16 characters each

Opening the directory (list of directory entries)

- ▶ In the **Applications** menu, touch [ **Contacts**] or touch [ **Contacts**] on the dial page or during a call.

Creating a new entry in the directory

- ▶ Open directory. ▶ Touch [ **New Entry**].
- ▶ Touch the individual fields to enter the corresponding component of the entry.

You can touch **Add Number** up to eight times to assign up to eight numbers to this entry.

To create an entry, you must enter at least one number.

You can save the components shown in the adjacent picture. If available, confirm each component with or [**Select**].

Defining default numbers


If you have entered several numbers, one of the options / (green) is displayed next to each number.

- ▶ Choose the default number for the entry by touching the corresponding option (= default number).
 If an entry has only one number, this is the default number.

The default number is the number automatically dialled when you touch the corresponding directory entry.

Saving a directory entry

- ▶ Touch [**Save**].

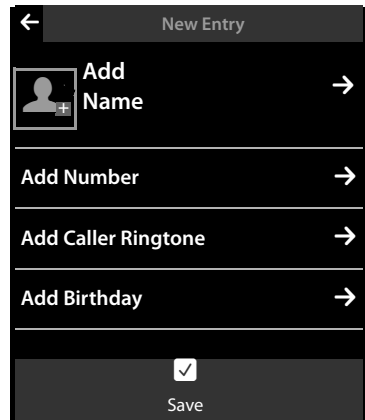

Order of directory entries

You can define whether the entries are to be sorted by first name or surname. Use [**Surname**] and [**First Name**] to define how the entries are to be sorted.

If no name was entered, the default number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0–9) | Letters (alphabetical) | Other characters.

Selecting a directory entry, navigating in the directory

If your directory has too many entries to display all at once, an alphabetical index is shown on the right side. You have the following options:

- ◆ Scroll vertically to the name you are searching for (→ page 14).
- ◆ Touch the first letter in the index. The display jumps to the first name that begins with this letter. If necessary, scroll on to the desired entry. While you are scrolling, the index is temporarily covered by a scroll bar.

Dialling with the directory

- ▶ Open the directory (→ page 23).

You have the following options:

- ▶ Press . The default number of the entry marked with the green dot is dialled.

Or:

- ▶ Touch the name in the entry. The default number of the entry is dialled. Exception: If you have opened the directory via the dial page, the phone number is transferred into the number field and can be expanded if required.

Or:

- ▶ Touch the corresponding to the entry and touch the desired number in the detail view.

Managing directory entries

Viewing an entry (detail view)

- ▶ Open the directory (→ page 23). ▶ Touch next to an entry.

All the information relating to the entry is displayed.

Editing entries

- ▶ Touch [Edit]. Continue as described under "Creating a new entry in the directory" (→ page 23).
- ▶ Change/delete first name, surname or number: Touch the corresponding ▶ If necessary, touch the corresponding field. ▶ Delete name/number with . ▶ If necessary, enter new name/new number. ▶ Confirm with .
- ▶ Delete the assignment of a caller picture, a VIP ringtone or a birthday: touch next to the appropriate entry. ▶ Touch [No Picture], [No Ringtone] or [No Birthday].

Deleting entries

- ▶ In the detail view, touch [Delete]. ▶ Press **Yes** to confirm.

Deleting all the directory entries (see "Deleting lists" on page 22)

Displaying the number of entries that are still available in the directory.

- ▶ Open the directory in idle status. ▶ Touch [Memory].

Transferring an entry/directory to another handset

Prerequisites:

- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.

You can transfer the entire directory, an individual entry or several entries.

Please note:

- ◆ An external call interrupts the transfer.
- ◆ Caller pictures and sounds are not transferred. For a birthday, only the date is transferred.

Transferring individual entries/directory

- ▶ Open the detail view for the entry (→ page 24). ▶ Touch [Copy] / [Copy List]. ▶ Answer the prompt with **Internal Handset**. Select the recipient handset.

When transferring individual entries, after a successful transfer:

- ▶ Touch **Yes** if another entry should be sent. Otherwise touch **No**.

Transferring the directory as a vCard with Bluetooth

- ▶ **Sending directory:** Open the directory. ▶ Touch [Copy List].

Or:

- ▶ **Sending entry:** Open the detail view for an entry. ▶ Touch [Copy].
- ▶ Answer the following prompt with **Bluetooth Device**. Bluetooth is activated, if necessary.
- ▶ Select the recipient from the **Known Devices** list (→ page 27) or touch [Search] and select the recipient from the **Devices found** list. Enter the recipient's PIN and touch .

Receiving a vCard with Bluetooth

Prerequisite: The handset is in idle status. Bluetooth is activated.

- ▶ If the sender is in the **Known Devices** list (→ page 27), receipt occurs automatically.
- ▶ If the sender is not in the **Known Devices** list, enter the sender's device PIN and touch .

To use the phone numbers, country and area codes must be stored in the base.

Adding a displayed number to the directory

You can copy numbers displayed in a list, e.g., the call list, the redial list, the answering machine list or in an SMS to the directory. You can also copy numbers that you have just dialled or entered for dialling.

- ▶ Touch [Copy Number] or [**Copy to Directory**]. You can:
 - Create a new entry (→ page 23): The number is copied as the first number of the entry with number type **Home**.
 - Add a number to an existing entry:
 - ▶ Select entry and touch **Add**. Or:
 - Select the number you want to overwrite. ▶ Touch **Yes**.

Copying a number from the directory

- ▶ Depending on the operating situation, open the directory with [Contacts] or [Phone].
- ▶ Touch a directory entry to copy its default number. Or: ▶ Touch the next to the entry and then touch the number to be copied.

Reminder call on an anniversary

A reminder call is signalled in **idle status**. You have the following options:

- ▶ Touch **Write Text Message** or
- ▶ Touch **Off** to acknowledge the reminder call and to exit.

When you are on the phone, a reminder call is indicated on the handset with a **single** advisory tone.

Anniversaries that are indicated during a call and anniversaries that are not acknowledged are entered in the list of missed appointments (→ page 21).

Using Bluetooth devices

You can register up to five data devices (PC, PDA, mobile phones) and one Bluetooth headset. You must activate Bluetooth on the handset, ensure the devices are visible if necessary and then register the handset.


You can exchange directory entries using the data devices and load ringtones and pictures to the handset using the **Gigaset QuickSync** software (→ page 42).

Please note


- ◆ A headset must have the **headset** or **speaker profile**. The speaker profile is preferred.
- ◆ Establishing a connection to a headset can take up to 5 seconds.


Activating/deactivating Bluetooth mode

You can activate/deactivate Bluetooth mode using the status page (→ page 12) or as follows:

- ▶ In the **Settings** menu (→ page 13), touch [ **Bluetooth**]. ▶ Activate/deactivate Bluetooth using the button to the right of **Activation**.

If Bluetooth is activated:

- ◆  is displayed in the status bar (→ page 4).
- ◆ The handset can communicate with all devices in the **Known Devices** list.
- ◆ The handset is visible to Bluetooth devices within its range.
- ◆ If the known devices include a headset, the handset establishes a connection to this headset.
- ◆ The handset searches for Bluetooth devices in the surrounding area (only if activated via the **Settings** menu).

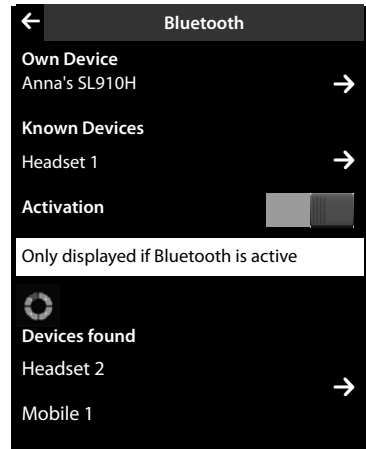

Finding and registering (trusting) Bluetooth devices

The distance between the handset and the activated Bluetooth device should be a maximum of 10 m.

Please note



- ◆ If you register a headset, any previously registered headset will be overwritten.
- ◆ If a headset is already registered to another device, please **deactivate** this connection before starting the registration process.

Starting the search

The search is started when you open the **Bluetooth** submenu under **Settings** and Bluetooth is activated.

- ▶ Open the **Devices found** list: Touch  to the right of the list (see picture above).

Trusting the device ▶ Adding the device to the known devices list


- ▶ Select the device from the **Devices found** list. ▶ Touch [ **Trust Device**]. ▶ If necessary, enter the PIN of the device to be registered. ▶ Confirm with .

PIN for a **data device**: Enter any PIN on the handset and then also on the data device.


PIN for a **headset**: In general, **0000** is preset. For this reason, you only need to enter the PIN in exceptional cases.

If the **Known Devices** already contains 6 entries, the last entry is overwritten. **Exception**: A headset only overwrites a headset.

Ending the search

- ▶ Close the **Bluetooth** submenu (touch ) or deactivate Bluetooth.

Editing the list of known (trusted) devices**Opening the list**



- ▶ In the **Bluetooth** submenu, touch  next to **Known Devices**.

A  next to the device name in the list indicates a headset and  indicates a data device.

Viewing device information, deregistering a device

- ▶ Open the **Known Devices** list. ▶ Select device. ▶ Touch [ Delete].

Changing the name of a device

- ▶ Open the **Known Devices** list. ▶ Select device. ▶ Touch the device name. ▶ If necessary, delete the previous name with . ▶ Enter the name. ▶ Confirm with .

Rejecting/accepting an unregistered Bluetooth device




If an unknown Bluetooth device tries to establish a connection, you will be asked to enter the device PIN.

- ▶ **Reject:** Touch .
- ▶ **Accept:** Enter the device's PIN. ▶ Confirm with .

Add to the **Known Devices** list: Touch **Yes**.

Temporarily use device: Touch **No**.

Changing the Bluetooth name of the handset

- ▶ In the **Bluetooth** submenu, touch  next to **Own Device**. ▶ If necessary, delete the previous name with . ▶ Enter the new name. ▶ Confirm with .

ECO DECT: reducing energy consumption and radiation

You are helping to protect the environment with your Gigaset handset.

Reduced energy consumption

Your telephone has a power-saving adapter plug and uses less power.

Reducing radiation (dependent on base)

The radiation can only be reduced if your base supports this function.

The radiation from your telephone is reduced **automatically** depending on the distance to the base.

You can reduce the radiation from the handset and base even more by using Eco Mode or Eco Mode+.

For further information, please refer to your base user guide.

Using a handset as a room monitor

If room monitor mode is activated, the saved destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. You can save an internal or external number in your handset as the destination number.

The room monitor call to an external number is cancelled after approx. 90 seconds, while the room monitor call to an internal number is cancelled after approx. 3 minutes (dependent on base). When the room monitor is activated, the talk and menu keys are locked. The handset's speaker is deactivated.

When room monitor mode is activated, incoming calls are only indicated on the display (**without a ringtone and silent alert**). The display backlight is reduced to 50%. Advisory tones are deactivated. Paging calls are not signalled.






If you accept an incoming call, the room monitor mode is suspended for the duration of the call, but the function **remains** activated.

The room monitor is not deactivated by switching the handset off and on again.

Warning

- **Please check the functionality when you switch on. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an external number.**
- Activating the function reduces the operating time of your handset. If necessary, place the handset in the **charger**.
- The handset should be positioned 1 to 2 metres away from the baby. The microphone must be pointed towards the baby.
- The connection used by the room monitor must not be blocked by an activated answering machine.

Changing the settings

- ▶ In the **Applications** menu, touch [ **Room Monitor**].
- ▶ Touch [ **Edit**]. ▶ Select the sensitivity (**High** or **Low**) and destination for the room monitor call (**Internal** or **External**).
- ▶ Touch [] next to **Number**:
In the case of **Forward alarm to Internal**: Select the destination from the list of internal participants.
In the case of **Forward alarm to External**: Enter the destination number.
- ▶ Confirm with []. ▶ Touch [ **Save**].

Activating the room monitor

- ▶ Push the button at the top of the display to the right.



Cancelling/deactivating the room monitor

When the room monitor is activated: Press .

Deactivating in idle status: Push the button to the left.

Deactivating the room monitor remotely

Prerequisite: The room monitor call is diverted to an external destination number. The recipient's phone supports tone dialling.

- ▶ Accept the room monitor call and press buttons [] [].


The room monitor function will deactivate after the call ends. The room monitor settings on the handset (e.g., no ringtone) are retained until you deactivate the room monitor on the handset.

Setting an appointment (calendar)


You can remind yourself of up to **100 appointments**. Birthdays in the directory (→ page 25) are transferred into the calendar.




Saving an appointment

Prerequisite: the date and time have already been set.

- ▶ In the **Applications** menu, touch [ **Calendar**].

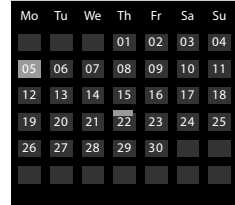The current day is highlighted in the calendar. Days with appointments are marked with a coloured bar.



- ▶ Touch  /  to set the month.
- ▶ Select the required day in the graphical calendar.
 - ▶ Touch [ **New**].

The following information can be added:

- **Text:** Name for the appointment (max. 16 characters).
 - **Time:** Time (hour and minute) for the appointment.
 - **Reminder:** By setting the slider, you can also be reminded of the appointment up to one week in advance.
 - **Sound:** Touch the square to activate/deactivate the acoustic signal.
- ▶ Touch [**Save**].

Signalling appointments and anniversaries

An appointment/anniversary is displayed in idle status and signalled for 180 seconds with the selected ringtone and volume (→ page 35).

You can deactivate and answer the reminder call:

- ▶ Touch **Write Text Message**. The SMS editor is opened.
- ▶ Touch **Off** to acknowledge and end the reminder call.


When you are on the phone, a reminder call is indicated on the handset with a **single** advisory tone.


Displaying missed appointments, anniversaries

Appointments/anniversaries (→ page 25) are displayed in the **Reminders / Events** list if:

- ◆ You do not accept an appointment/anniversary.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset was deactivated at the time of the appointment/anniversary.

You can open the **Reminders / Events** list via the message page in the idle display. The following icon is displayed for the list.

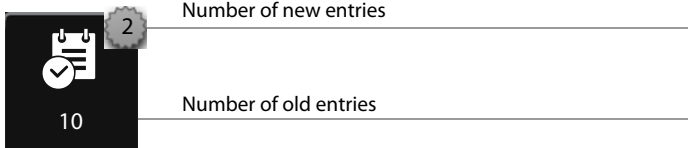





- ▶ Touch the icon to open the list.
- ▶ **Delete an entry:** Touch an entry in the list and then touch [ **Delete**].

If 20 entries are saved in the list, the oldest entry is deleted at the time of the next unacknowledged appointment reminder.

Please note

To delete the entire contents of the list, see page 22.






Setting a reminder call

- ▶ In the **Settings** menu (→ page 13), touch [ **Audio Settings**]. ▶ Touch the  next to **Reminder Signal**.
- ▶ Adjust the volume with \oplus / \ominus or activate the crescendo call with the button next to **Crescendo**.
- ▶ Touch the  next to **Sound**. ▶ Select the ringtone. ▶ Back with 

Setting the alarm clock

Prerequisite: the date and time have already been set.

You can activate/deactivate and set the alarm clock using the status page (→ page 12) or as follows:

- ▶ In the **Applications** menu (→ page 13), touch [ **Alarm**].
- ▶ Activate/deactivate the alarm clock with the button at the top of the display.
- ▶ Touch [ **Edit**] to change the settings for the alarm clock.
- ▶ Set the hour and minute for the wake-up time.
- ▶ In the following line, select the weekdays when the alarm clock should sound.
- ▶ Touch the  next to **Ringtone**. ▶ Select a ringtone for the alarm call. ▶ Back with 
- ▶ Touch [ **Save**] and confirm the security prompt.

An alarm call is signalled in the display and with the selected ringtone for a maximum of 180 seconds. During a call, the wake-up call is only signalled by a short tone.

Deactivating the wake-up call/repeating after a pause (snooze mode)




Prerequisite: A wake-up call is sounding.

- ▶ **Deactivate:** Touch **Off**.
- ▶ **Snooze mode:** Touch **Snooze**. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition, the wake-up call is deactivated completely.


Screensaver, caller pictures and sound pool

The sounds/ringtones, caller pictures or pictures for the screensaver are managed in the pools. Pictures and mono/polyphonic sounds are saved in your handset by default. You can load additional pictures and sounds onto the handset from your PC (→ page 42).

Viewing/deleting pictures

- ▶ In the **Applications** menu (→ page 13), touch [ **Screensavers**] / [ **Caller Pictures**].
- ▶ Drag your finger from right to left or left to right over the display to view the individual pictures.
- ▶ **Delete picture:** Scroll to the picture. ▶ Touch [ **Delete**]. ▶ Press **Yes** to confirm.

Playing back sounds

- ▶ In the **Applications** menu (→ page 13), touch [ **Sounds**]. ▶ Select a sound.

Using the handset on the base

Registering a handset to another Gigaset SL910/SL910A base


You can register your handset on up to four bases.

You must initiate registration of the handset on the base (1) and on the handset (2). Once registration is complete, the handset returns to idle status. The handset's internal number is shown in the status bar of the display, e.g., INT 1. If not, repeat the procedure.


1) On the base

- ▶ Press and **hold** the registration/paging key on the base (approx. 3 seconds).

2) On the handset (within 60 seconds)



- ▶ In the **Settings** menu (→ page 13), touch [ **Handsets and Base**] and then **Register**.

If the handset is already registered to four bases:

- ▶ Touch the base where the registration should be overwritten, e.g., **Base 2**. The handset searches for a base that is ready for registration.
- ▶ If necessary, enter the system PIN for the base (max. 8 digits) and confirm with .

De-registering the handset


 
You want to de-register the handset currently being used.

- ▶ In the **Settings** menu (→ page 13), touch [ **Handsets and Base**].
- ▶ Touch **De-register**. ▶ If necessary, enter the system PIN. ▶ Confirm PIN with . ▶ Handset de-registration is confirmed with **Yes**.

If the handset is still registered to other bases, it switches to the base with the best reception (**Best Base**; → page 31).

Changing the base

If your handset is registered to more than one base, you can set it to a particular base or to the base that has the best reception (**Best Base**).

- ▶ In the **Settings** menu (→ page 13), touch [ **Handsets and Base**].
- ▶ Touch **Connected to Base**  ▶ Select the desired base or **Best Base** (● = set).

Configuring the handset


Your handset comes with default settings, but you can change the settings to suit your individual requirements.

Quick access to functions, QuickDial – customising your own idle display page

On the configurable page of the idle display (→ page 11, example → page 10), you can customise applications, functions and phone numbers for quick access.

Starting the configuration process


- ▶ While in idle status, open the configurable page (→ page 13).

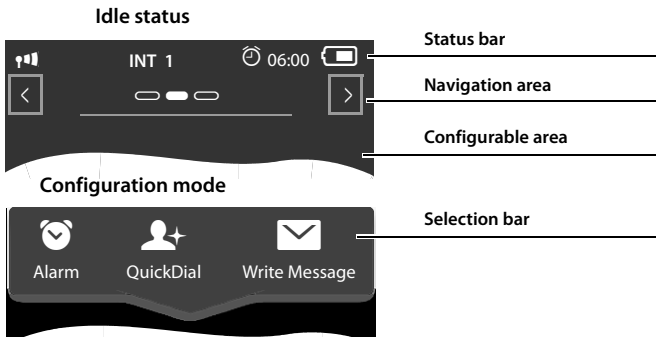

- ▶ Press and **hold** (approx. 2 seconds) any position on the configurable area on the display.

A selection bar with functions is displayed in the header, and you can drag it onto the configurable page (→ page 32). You can move the selection bar horizontally (Scrolling horizontally, → page 15) to display further selection options.

Completing the configuration process

- ▶ Either press and **hold** any position on the configurable area of the display, or briefly press . The settings are saved.

Adding application/function

In configuration mode:

- ▶ Drag the function/application using drag&drop from the selection list into the configurable area.

With the exception of QuickDial, you can only drag the functions to the configurable area once.

You can collate a maximum of 18 functions, applications or QuickDial shortcuts on the configurable page. You can only use the functions/applications after exiting configuration mode.

Removing application/function

In configuration mode:

 
- ▶ Drag the corresponding icon back into the selection list.

A QuickDial is deleted. The related entry in the directory remains unchanged.

The settings for all other functions (e.g., wake-up time) remain unchanged.

Selectable applications and functions

Icon




Description


Display of the current **date** (if set).
If the date has not yet been set, the icon flashes.
▶ Set the date: Touch the icon.



 
Display of the current **time** (if set).
If the time has not yet been set, the icon flashes.
▶ Set the time: Touch the icon.



 
Display of the **alarm status** and (if the alarm is activated) the wake-up time.
▶ Touching the icon opens up the alarm clock menu (→ page 30).



QuickDial: QuickDial is only available in the selection bar if there are numbers in the directory. You can drag several QuickDial icons to the configurable area and assign them different numbers from the directory (→ page 33). The caller picture (if configured) and the number type are displayed on the icon. If no caller picture is assigned to the number in the directory, the name and number are displayed.

 


 ▶ Touch the icon to dial the corresponding number directly.




Quick access to the **room monitor application**.

 ▶ Touch the icon to display the menu for activating/deactivating and setting the room monitor application (→ page 28).



Call list (dependent on your base)

 ▶ Touch the icon to open the call list (→ page 21).



Directory

▶ Touch the icon to open the handset's local directory (→ page 23).



Write Text Message

▶ Touch the icon to open the page for writing an SMS.

Configuring QuickDial





In configuration mode:

- ▶ Drag the icon for QuickDial into the configurable area and drop it. The directory is opened.
 - ▶ Select an entry. ▶ In the detail view for the entry, select the phone number with which the QuickDial icon should be linked.

Please note




- ◆ The QuickDial number changes if you change the corresponding number in the directory.
- ◆ If you delete the number assigned to the QuickDial shortcut from the directory, the QuickDial icon is deleted from the configurable page without prompting.

Changing the display language

- ▶ In the **Settings** menu (→ page 13), touch [ **Language and Location**].
- ▶ Touch  next to **Display Language**. ▶ Select language (● = selected). ▶ Confirm with  ▶ Back with .


Configuring the keyboard/keypad




You can change the appearance and behaviour of the keypad shown in the display. The settings do not correspond to the handset keys (↵ ○ ☎).

- ▶ In the **Settings** menu (→ page 13), touch [ **Display and Keypad**]. ▶ Scroll to **Keypad**. You can configure the following:
 - ◆ **Key Tones:** Every time you touch a number, a confirmation tone is audible.
 - ◆ **Key Vibration:** Every time you touch a number on the keypad, the handset vibrates.
 - ◆ **Keypad with R/P:** With R you can insert a line interruption (recall), with P a dialling pause. You can insert a "P" by pressing and holding the  key and an "R" by pressing and holding the  key.
 - ◆ **Keypad w. Letters:** For dialling with letters – sometimes used for entering service numbers, for example.
- ▶ You can use the button on the right to activate or deactivate the relevant function directly.

Setting the display

Setting the screensaver/slide show



In idle status, you can display a screen saver (default setting: **Off**). The screensaver replaces the display screen when the handset is in idle status. To display the idle display again, **briefly** press  or the display.

- ▶ In the **Settings** menu (→ page 13), touch [ **Display and Keypad**].
- ▶ Activate/deactivate the screensaver via the right button. ▶ Touch  next to **Selection**. Select screensaver/slide show. ▶ Touch [ **Select**].

Setting the display backlight

You can specify a particular period in idle status after which the display backlight should switch off. If it does not switch off, the display is permanently dimmed.

The display backlight switches itself on as soon as the handset is moved.


- ▶ In the **Settings** menu (→ page 13), touch [ **Display and Keypad**].
- ▶ Using the right button, activate/deactivate the display backlight in the charger or outside the charger.
- ▶ Touch the  next to **Backlight Timeout**. Select the off time.

Please note

The handset's standby time can be significantly reduced if the display backlight is activated.



Activating/deactivating auto answer

In the case of auto answer, the handset accepts an incoming call as soon as you take it from the charger. In the same way, the connection ends when you place it in the charger.

- ▶ In the **Settings** menu (→ page 13), touch [ **Telephony**]. ▶ Activate/deactivate the function with the button to the right of **Auto Answer**.

Changing the earpiece, speaker and headset volume

The volume of the mode currently in use (speaker, earpiece, headset) is changed. During a call:

- ▶ Touch [ **Volume**]. ▶ Adjust the volume with \oplus / \ominus .
- ▶ If a headset is connected: To adjust the **Microphone Sensitivity**, touch \oplus / \ominus in the second row several times if necessary.
- ▶ Touch  at the bottom of the display to save the settings. Automatic saving occurs after approx. 2 seconds.

Setting a speaker profile

You can set various speaker profiles to optimally adapt your phone to your environment.

Profile 1

The optimum setting for most connections.

Profile 2

Optimum volume in speaker mode. However, this means that the participants cannot speak at the same time as the person speaking is given preferential transmission (making two-way conversations difficult).

Profile 3

Optimises two-way conversations, both callers can hear each other, even if they talk at the same time.

Profile 4

Optimised for special connections. If the preconfigured **Profile 1** does not provide optimum sound, please try with **Profile 4**.

During an external call in speaker mode:

- ▶ In the option slider, touch  and then [ **Speaker Profiles**]. ▶ Select the profile to be used with immediate effect.

Setting ringtones

- ▶ In the **Settings** menu (→ page 13), touch [ **Audio Settings**]. ▶ Touch the  next to **Ringtones**.

You can configure the following settings:



Setting the volume

- ▶ Touch \oplus / \ominus , several times if necessary, to adjust the volume.

Or



- ▶ Activate/deactivate the crescendo call with the button next to **Crescendo**.


Setting the ringtone

- ▶ Touch the  next to **Int. Calls** or **Ext. Calls**.
 - ▶ Select the ringtone. ▶ Back with 

Activating/deactivating time control for external calls

You can specify a time period when you do not want the telephone to ring.

- ▶ Touch the  next to **Time Ctrl (Ringer Off)**.
 - ▶ Touch **Switch off ringtones from**. ▶ Set the start of the time period. ▶ Back with 
 - ▶ Repeat the process for **until** to set the end of the time period. ▶ Activate/deactivate the time control with the button next to **Activation**.

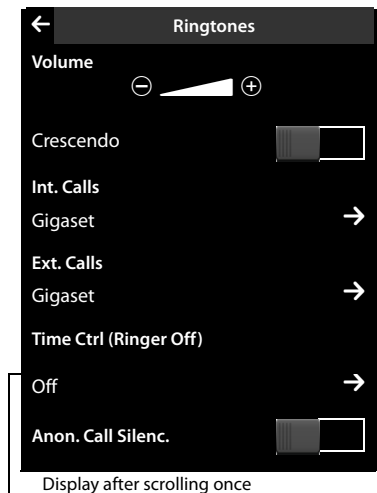

Please note

During this period, you will continue to receive calls from numbers to which you have assigned a personalised ringtone in the directory (VIP).

Activating/deactivating the ringtone for anonymous calls

The phone should not ring in the case of calls from withheld phone numbers, but instead just show them in the display:

- ▶ You can activate/deactivate this function using the button to the right of **Anon. Call Silenc.** (if the function is activated, the ringtone is deactivated).

Activating/deactivating silent alert

- ▶ In the **Settings** menu (→ page 13), touch [🔊 **Audio Settings**]. ▶ Activate/deactivate the function with the button to the right of **Silent Alert**.

Activating/deactivating ringtone/silent alert

You can activate/deactivate the ringtone and the silent alert permanently via the status page (→ page 12).

- ▶ Open the status page (→ page 12). ▶ Activate/deactivate the ringtone and, if activated, the silent alert, with the button to the right of **Do not disturb**.

Deactivating the ringtone/silent alert for the current call

- ▶ Touch [🔇 **Silence**].

Activating/deactivating advisory tones

Your handset uses advisory tones to tell you about different activities and statuses.

- ▶ In the **Settings** menu (→ page 13), touch [🔊 **Audio Settings**].

You can activate/deactivate the following functions with the buttons to the right:

◆ **Confirmations:**

Confirmation tone after making entries, advisory tone when a new message has been received, the error tone.

◆ **Battery Warning:**

Warning tone where the battery charge is less than 10% (every 60 seconds). No battery warning is sounded if the room monitor is activated.

Restoring the handset default settings

You can reset any individual settings and changes that you have made.

The following are **not** affected by the reset:

- ◆ The base registration(s) of the handset and the current base selection
- ◆ Date/time
- ◆ Entries in the calendar and in the directory
- ◆ Call lists, SMS lists and the content of the media pool
- ◆ The external or internal destination number stored for the room monitor

- ▶ In the **Settings** menu (→ page 13), touch [⚙️ **System**].
- ▶ If necessary, scroll to **Resets**. ▶ Touch **Handset Reset**. ▶ Confirm with **Yes**.

In the [⚙️ **System**] submenu:



Service (Customer Care)

You have questions? As a Gigaset customer, you can take advantage of our comprehensive service offerings. You can find help quickly in this User Manual and in the service pages of our Gigaset online portal.

Please register your phone right after purchase.

This enables us to provide you with even better service regarding questions or a warranty claim. Your personal user account enables you to directly contact our customer service by email.

Our representatives are available on the telephone hotlines for more advanced questions or immediate consultation.

United Kingdom

www.gigaset.com/uk/service

Service Hotline: 0845 367 0812

(local call cost charge)

Ireland

www.gigaset.com/ie/service

Service Hotline: 1850 777 277

(6.6561 Ct./Call)

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

Questions and answers

If you have any queries about the use of your telephone, visit our website at

www.gigaset.com/service for 24-hour support.

Exclusion of liability

The display on the Gigaset SL910H has a resolution of 480x320 pixels, which is achieved with the aid of 460,800 control elements. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a pixel is incorrectly controlled or has a colour deviation. **This is normal and no reason for a warranty claim.**

The following table shows the number of pixel errors that may occur without leading to a warranty claim.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1

Authorisation

This device is intended for use within the European Economic Area and Switzerland. If used in other countries, it must first be approved nationally in the country in question.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address:

www.gigaset.com/docs

CE 0682

Guarantee Certificate - United Kingdom

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user guides.
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads). User guides and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by: Gigaset Communications UK Limited, Quatro House, Lyon Way, Camberley, Surrey, GU16 7ER.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

Guarantee Certificate - Ireland

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
 - ◆ The device is opened (this is classed as third party intervention)
 - ◆ Repairs or other work done by persons not authorised by Gigaset Communications.
 - ◆ Components on the printed circuit board are manipulated
 - ◆ The software is manipulated
- ◆ Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
- ◆ Devices fitted with accessories not authorised by Gigaset Communications
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Gigaset Communications UK Limited, Quatro House, Lyon Way, Camberley, Surrey, GU16 7ER.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

Please note

Signs of wear on the display and metal frame are excluded from the warranty.

Environment

Our environmental mission statement

We, Gigaset Communications GmbH, bear social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, utilisation, service and disposal, are already evaluated during product and process design.

Further information on environmentally friendly products and processes is available on the Internet at www.gigaset.com.

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Appendix

Care

Wipe the base station, charging cradle and handset with a **damp** cloth (do not use solvent) or an anti-static cloth.

Never use a dry cloth. This can cause static.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the handset has come into contact with liquid:

- 1 **Switch off the handset and remove the battery pack immediately.**
- 2 Allow the liquid to drain from the handset.
- 3 Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)**.
- 4 **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Specifications

Batteries

Technology: Lithium ion (Li-Ion):

Voltage: 3.7 V

Capacity: 1000 mAh

Type: V30145-K1310-X447

The handset is supplied with the recommended battery. Only an original battery may be used. Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is updated regularly:

www.gigaset.com/service

The device is supplied with the recommended battery.

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity and age of the battery and the way it is used. (All times are maximum possible times).

Standby time (hours) *	200
Standby time in Eco Mode+ (hours) *	130
Talktime (hours)	14
Operating time for 1.5 hours of calls per day (hours) *	106
Operating time in Eco Mode+ for 1.5 hours of calls per day (hours) *	75
Charging time in charger (hours)	5

* Without display backlight (Setting the display backlight → page 34)

Accessing additional functions via the PC interface

To enable your handset to communicate with a PC, the "**Gigaset QuickSync**" program must be **installed on your PC** (free to download and more information at www.gigaset.com/gigasetSL910).

A detailed description can be found in the **Gigaset QuickSync** help file.

Index

A

Activating	
advisory tones	36
appointment	29
auto answer	34
display lock	17
key lock	17
Advisory tones	36
Alarm clock	30
Anniversary	25
missed	21, 29
saving in directory	25
Answering machine list	21
Applications menu	13
Appointment	29
Appointment/anniversary	
displaying missed	29
Authorisation	38
Auto answer	34

B

Back function	16
Backlight	
display	34
Base	
changing	31
setting up	7
Battery	
charging	9
charging status	4
inserting	8
Battery charging status	4
Best base	31
Bluetooth	
accepting a call	18
activating	26
changing device name	27
list of known devices	27
registering devices	26
transferring directory (vCard)	25
Button	11

C

Calendar	29
Call	
accepting	18
accepting (Bluetooth)	18
external	17
internal	18
Calling	
externally	17
internally	18
Care of the telephone	41
Changing	
character set	16
device name (Bluetooth)	27
display language	34
display page	12
earpiece volume	35
keyboard assignment/character set	16
menu pages	13
page	12
ringtone	35
speaker volume	35
CLIP picture	30
Configurable page	10
idle display	11
Correcting incorrect entries	15
Customer Care	37

D

Deactivating	
advisory tones	36
appointment	29
auto answer	34
display lock	17
key lock	17
room monitor	28
unknown call	36
De-registering (handset)	31
Destination number (room monitor)	28
Diacritical characters	16
Dial page (idle display)	3, 11
Dialling with the directory	24

Index

Directory	23
copying number from text	25
managing entries	24
opening.....	10
order of entries	23
saving anniversary	25
saving entry	23
sending entry/list to handset.....	24
transferring a vCard (Bluetooth)	25
using to enter numbers.....	25
Directory memory.....	24
Display	
backlight.....	34
changing display language	34
directory memory.....	24
in idle status.....	11
missed anniversaries	21
screensaver.....	34
setting	34
slide show.....	34
Display lock.....	17
Displaying	
missed appointments/anniversaries ..	29
Disposal.....	40
E	
Earpiece mode.....	18
ECO DECT	27
End call/end key	3, 17
End key	3
Entering	
numbers	15
special characters	16
text	15
umlauts	16
Environment.....	40
Error tone	36
F	
Function	
activating/deactivating.....	11
selecting	11
G	
Guarantee Certificate.....	38

H

Handset	
activating/deactivating.....	11
advisory tones	36
changing to best reception	31
changing to different base	31
contact with liquid.....	41
de-registering	31
display backlight.....	34
display language.....	34
earpiece volume	35
idle display	10, 11
idle status	10, 11, 16
muting.....	18
operating	11
overview	3
registering	31
registering to different base.....	31
restoring to default settings.....	36
screensaver.....	34
setting	32
setting up	7
speaker volume.....	35
using multiple	31
using room monitor	28
Handset operating time	
in room monitor mode	28
Hearing aids	6
Help	37
I	
Icons	
for new messages.....	22
option slider.....	5
status bar	4
Idle display	
configurable page	10
dial page.....	3
handset	10, 11
messages page	11
Idle status	
returning to	16
Incorrect entries, correcting.....	15
Internal call.....	18

- K**
- Key lock 17
 - Key/display lock on/off 3
 - Keypad 3
 - Keys
 - end call/end key 17
 - handset 3
 - menu key 3
 - talk key 3
- L**
- Liquid 41
 - List
 - answering machine 21
 - known devices (Bluetooth) 27
 - network mailbox 21
 - scrolling in 14
 - SMS inbox 21
 - Lock
 - activating/deactivating display lock .. 17
 - activating/deactivating key lock 17
 - Lower/upper case 15
- M**
- Making calls
 - accepting a call 18
 - external 17
 - internal 18
 - Medical equipment 6
 - Menu
 - applications 13
 - opening 13
 - settings 13
 - using 13
 - Menu key 3
 - Message page
 - idle display 11
 - Messages page
 - opening lists 21
 - Mini USB connection socket 3
 - Missed
 - anniversary 29
 - appointment 29
 - Muting the handset 18
- N**
- Navigation area 3, 12
 - Number
 - as destination for room monitor 28
 - copying to directory 25
 - entering with directory 25
 - saving in the directory 23
- O**
- Opening the submenu 14
 - Option slider 3, 15
 - icons 5
 - moving 15
 - showing/hiding 15
 - Order in directory 23
- P**
- Package contents 7
 - PC Interface 42
 - Picture
 - caller 30
 - Power adapter 6
- Q**
- Questions and answers 37
 - Quick access 10
 - QuickDial 23, 32
 - Quickly accessing functions 32
- R**
- Redial 21
 - Registering (handset) 31
 - Registering device (Bluetooth) 26
 - Registration 6
 - Reminder call 25
 - Resource directory 30
 - Ring delay 34
 - Ringtone
 - changing 35
 - setting volume 35
 - Room monitor 28

Index

- S**
- Screensaver 34
 - Scrolling in lists 14
 - Searching in directory 24
 - Selecting a list entry 11
 - Selecting an entry from the directory ... 24
 - Sending
 - directory entry to handset 24
 - Service 37
 - Setting up
 - base 7
 - handset 7
 - Settings menu 13
 - Signal strength 4
 - Signal tone, see Advisory tones
 - Silent alert 36
 - Slide show 34
 - SMS
 - inbox 21
 - writing 16
 - Snooze mode 30
 - Sound, see Ringtone
 - Speaker mode 18
 - set profile 35
 - Speaker profile 35
 - Specifications 41
 - Starting Bluetooth search 26
 - Status bar 3, 12
 - icons 4
 - Status page 12
 - closing 12
- T**
- Talk key 3
 - Text
 - entering 15
 - Touchscreen 3
 - operating 11
 - Troubleshooting (general) 37
- U**
- Upper/lower case 15
 - USB connection socket 3
- V**
- Vertical scrolling 14
 - Volume
 - handset speaker volume 35
 - ringtone 35
- W**
- Warning tone, see Advisory tones

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2011

All rights reserved. Subject to availability.

Rights of modification reserved.

www.gigaset.com